



(P) = WIND PRESSURE IN PASCALS

(H) = HEIGHT FROM THE GROUND TO THE CENTRE OF THE SIGN

SEE DRAWINGS 500.3-5.1 & 500.3-5.2 FOR PROVINCIAL WIND PRESSURE TABLES. (USE 1 IN 10 WIND PRESSURE)



Province of British Columbia

Ministry of Transportation and Highways

NOT TO SCALE

No.	Revision	Date	2 3/8" O.D. ROUND STEEL SIGN POST ON BARRIER STAND LOADING TABLE	
F			Date	Approved
E			18/11/94	E.L. (Signature on File)
D				Chief Highway Engineer
C				DRAWING No.
B				500.3-4.2
A	PREVIOUSLY IN CONSTRUCTION STANDARDS	SEPT96		