



(P) = WIND PRESSURE IN PASCALS

- 100Pa (P)
- 200Pa (P)
- 300Pa (P)
- 400Pa (P)
- 500Pa (P)
- 600Pa (P)

(H) = HEIGHT FROM THE GROUND TO THE CENTRE OF THE SIGN

SEE DRAWINGS 500.3-5.1 & 500.3-5.2 FOR PROVINCIAL WIND PRESSURE TABLES. (USE 1 IN 10 YEAR WIND PRESSURE)



Province of British Columbia

Ministry of Transportation and Highways

NOT TO SCALE

No.	Revision	Date	<b>1 1/2" O.D. PERFORATED SQUARE STEEL SIGN POST LOADING TABLE</b>	
F				
E				
D				
C				
B			Date	Approved
A	PREVIOUSLY IN CONSTRUCTION STANDARDS	SEPT96	<b>18/11/94</b>	<b>E.L. (Signature on File)</b> Chief Highway Engineer
			DRAWING No.	
			500.3-3.1	