



ELEVATION

(P) = WIND PRESSURE  
IN PASCALS

(H) = HEIGHT FROM THE GROUND  
TO THE CENTRE OF THE SIGN

SEE DRAWINGS 500.3-5.1 & 500.3-5.2 FOR  
PROVINCIAL WIND PRESSURE TABLES.  
(USE 1 IN 10 WIND PRESSURE)



**Province of  
British Columbia**

Ministry of  
Transportation  
and Highways

NOT TO SCALE

**2 3/8" O.D. ROUND STEEL  
SIGN POST LOADING TABLE**

| No. | Revision                             | Date   |
|-----|--------------------------------------|--------|
| F   |                                      |        |
| E   |                                      |        |
| D   |                                      |        |
| C   |                                      |        |
| B   |                                      |        |
| A   | PREVIOUSLY IN CONSTRUCTION STANDARDS | SEPT96 |

Date Approved  
**18/11/94** **E.L. (Signature on File)**  
Chief Highway Engineer

DRAWING No.  
**500.3-4.1**